





- 1.4. While still in **Setting** tab, near the bottom change the Codec Selection to **WMV9** (this will be more compatible for Windows Media Player).

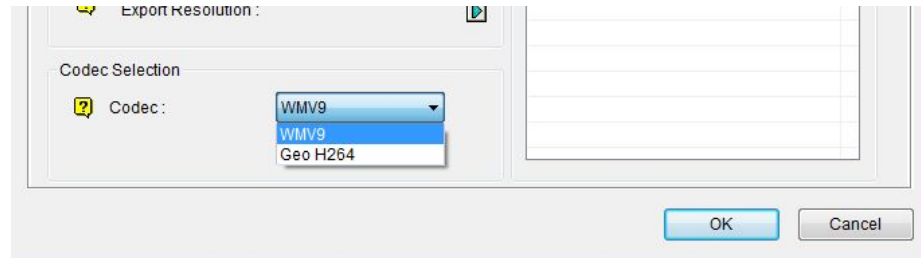


- 1.5. Click **Avi View** tab.
- 1.6. Adjust start & end time to pick precise footage to save.

**NOTE: To save another camera and/or span of time you can queue up more AVIs to save while the first one is merging. The Merging sub-window will show you the progress of the current merge and the stack of other AVIs queued to merge in the order you added them.**

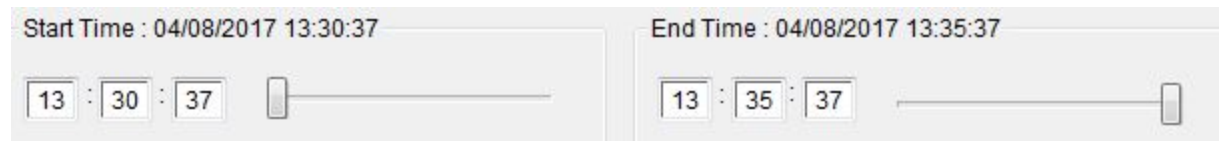

- 1.7. Click Ok.
- 1.8. Processing the footage to an Avi file progress bar now appears. Could take a few minutes to much longer (hours) depending on how much footage is involved.

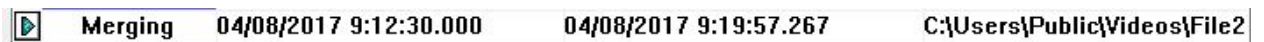

- 1.9. The Avi file(s) will be located where you set the location (such as **C:\Users\Security\Desktop**) when processing is finished.
- 1.10. Plug a USB thumb drive into the NVR computer USB port.
- 1.11. Copy & Paste Avi file(s) to USB drive.
- 1.12. To playback on another computer plug USB thumb drive into a Windows computer, then open in *Windows Media Player* or *VLC Media Player* to play Avi clip.